

1.



Old lock & keeper



Remove old keeper



Replace with new keeper




Permanently fasten new lock in same position as old lock.

2.





Mark position of new lock over notches of old lock.

3.

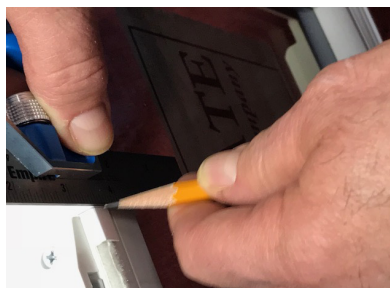

Mark both sides.

4.

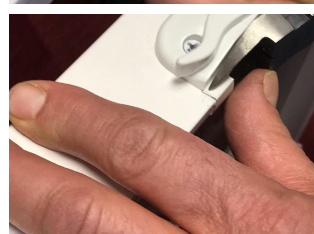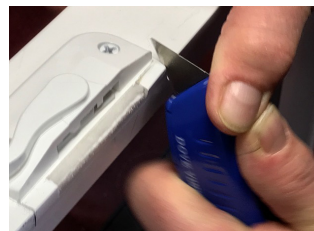

Cut out whole section where lock sits. Remove entire piece below marks after cutting both left and right sides.