



Model 9400 Direct Set Picture Window Cap Bead Sealant Application Instructions

Tape glazing creates a gap to be sealed in the field after window is installed, shimmed and secured into the opening. This assures a water tight seal on the unit.

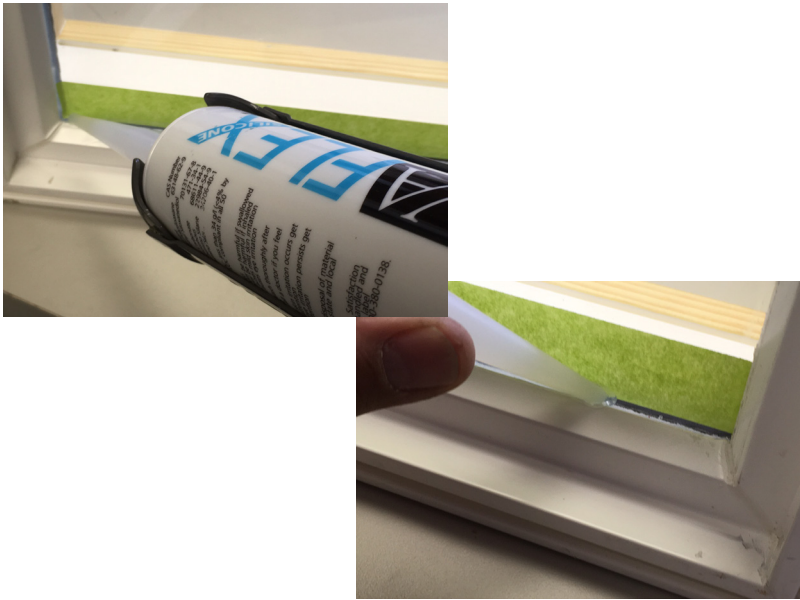

To control sealant, mask perimeter and apply a high quality silicone sealant (Novaflex or equal) around the exterior perimeter of the glass where the glass meets the composite frame.

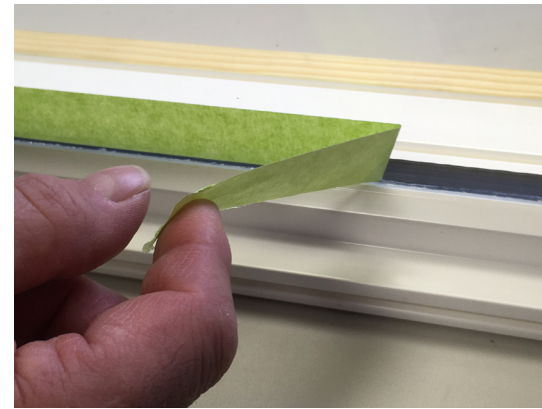

Prior to removing the masking, the bead of silicone around the perimeter must be tooled. Remove tape.

