


Supplies needed:

1. High grade silicone caulk compatible with glass and vinyl.
2. Painters Tape

CompositWood®
BY INTERSTATE




A. On the exterior of the window, apply painters tape to the glass surface exposing the void between the glass and the glazing bed.

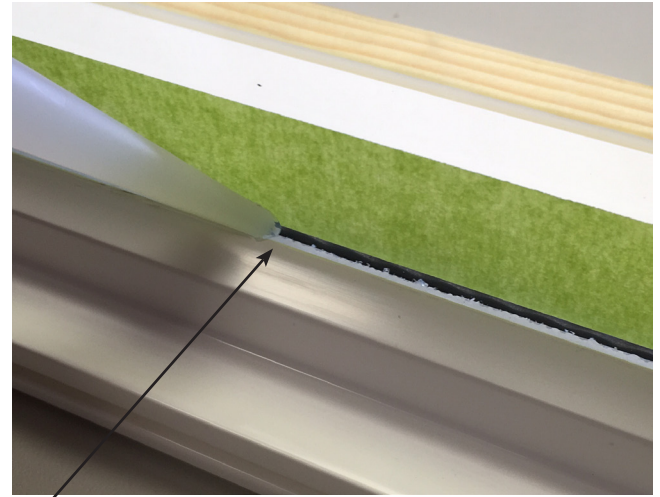

B. With small applicator tip push a 1/16" continuous (unbroken) silicone bead into the void between the exterior of the glass and the exterior sash frame.



C. The complete perimeter must be sealed.

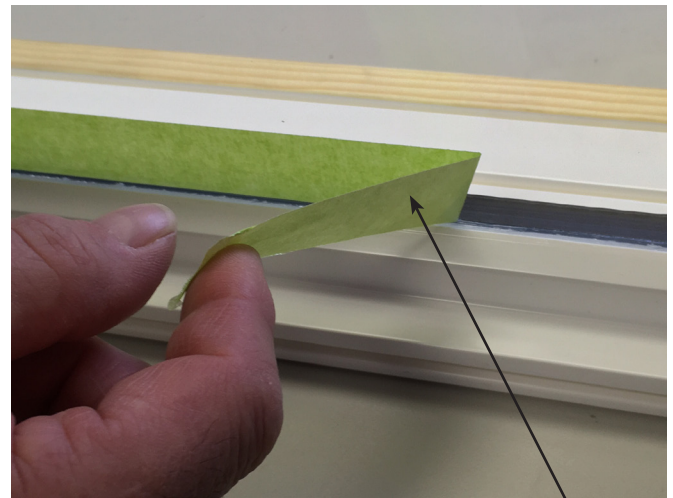

D. Tooling the glazing bead may be necessary. When application is complete, remove painters tape.