


Replacement of Old Balance or Installation of New Balance for Interstate Windows



Place a mark to measure down from the center point of the jamb so the balance is below the tilt latch assuring it doesn't hit the tilt latch mechanism. Measure the height of the tilt latch and add 1/8" to install balance.

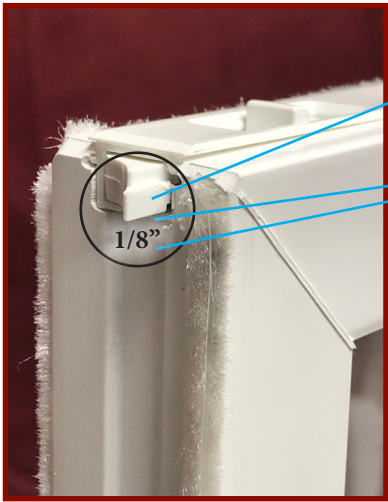

Bottom sash tilt latch - Balance must be installed 1/8" below it.




Top sash balance replacement installation location. Insert the new balance so the bottom edge is 1/2" above the top of the bottom sash.

Old Balance Removal:

Cut an opening at the top of the vinyl window jamb with a sharp utility knife, the size of the new balance and the bottom of the outside chamber for the top sash balance. When possible, sash stops could be available to cover over the cutout that is necessary to do the repair.

Suggested Tool:

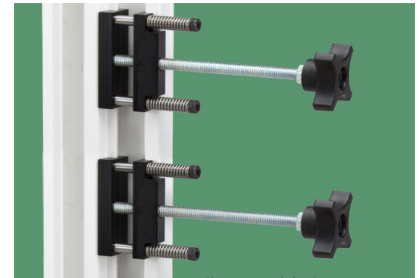

Jamb Spreader

For more information go to the vendor's website,
www.SWISCO.com



3000 North Township Blvd.
Pittston, PA 18640
800-338-9997